



### Technical data

#### Humidity

measuring range ..... 0...100% rh  
accuracy (mr 5...95% rh at 10...40°C) ..... ±2% rh  
temperature influence <10°C, >40°C ..... <0.1%/K additional

#### Temperature

measuring element (ref. DIN IEC 751) ..... Pt 100 1/3 DIN  
measuring range ..... -30...+70 °C  
accuracy  
output: 0...1V (-27...70°C) ..... ±0.2 K  
0...10V (-29...70°C) ..... ±0.2 K  
4...20 mA (RC) ..... ±0.3 K  
temperature influence <10°C, >40°C ..... ±0.007 K/K additional

#### Other Data

ambient temperature ..... -40...+80°C  
degree of protection sensor/electronic ..... IP 30/IP 65  
operating voltage  
    output voltage 0...10V ..... 15...30 V DC  
    output voltage 0...1V ..... 6...30 V DC  
    output current ..... 12...30 V DC  
min. load resistance 0...10V/ 0...1V ..... ≥ 10 kΩ/≥ 2 kΩ  
load (current output) ..... acc. diagramm  
power consumption  
    0...10 V, 2 x 0...1V ..... <5mA  
    0...1V ..... <1mA  
minimum air speed (across the sensor)  
output: 0...10V, 2x 0...1V ..... ≥ 0.5 m/s  
4...20mA, 2x 0...10V ..... ≥ 1.5 m/s  
2x 4...20 mA ..... ≥ 1.5 m/s  
self-heating coefficient Pt100 (v=2 m/s in air) ..... 0.2 K/mW  
electromagnetic compatibility ref. EN 61326-2-3

„subject to technical modifications“

Special versions available on request

### Product info sheet no. C 2.4 Humidity/temperature sensor Meteorological design

#### Description

**Mela®-humidity/temperature sensors** in the PC-ME series with a fixed connecting cable (5 m), PK-ME series without cable or RC-ME series with a robust aluminium connecting head and terminal screws are compact sensors in a rod-type design. They have a high degree of accuracy and have been specially developed for meteorological applications. All the sensors in the series are fitted with the **ZE20**-type membrane filter.

We recommend that you use the version with the the **ZE 21/ZE22** type sintered high-grade steel filter (filter programme see product info sheet no. F 5.1) at high wind speeds or if the sensor is exposed to salt mist, sand or dust (near the sea, industrial estates etc.).

The advantage of the .../9 series is the improved temperature dynamics, in particular at low air speeds.

1) In the series .../9 it is not possible to exchange the protective plastic basket ZE16 with other filters.

#### Type versions

Measured variable	Analogue output	with filter <b>ZE 20 or ZE21</b> Pt-100 platinum chip	with integrated PTFE filter protection <b>ZE 16</b> , Pt-100 glass
<b>F</b> rel. humidity	0...10 V	FP* 2/x - ME	FP* 2/9 - ME
	0...1 V	FP* 1/x - ME	FP* 1/9 - ME
<b>C</b> r.h. + temp.	0...10 V, Pt 100	CP* 2/x - ME	CP* 2/9 - ME
	0...1 V, Pt 100	CP* 1/x - ME	CP* 1/9 - ME
<b>K</b> r.h. + temp.	2 x 0...10 V	KP* 2/x - ME	KP* 2/9 - ME
	2 x 0...1 V	KP* 1/x - ME	KP* 1/9 - ME
<b>T</b> temperature	Pt 100	TP* 5/x - ME	TP* 5/9 - ME
	0...10 V	TP* 2/x - ME	TP* 2/9 - ME
	0...1 V	TP* 1/x - ME	TP* 1/9 - ME
weight		approx. 310g	approx. 300g

Sensor with 5 m cable

\* = C

Sensor without cable

\* = K

Measured variable	Analogue output	with filter <b>ZE 20 or ZE21</b> Pt-100 platinum chip	with integrated PTFE filter protection <b>ZE 16</b> , Pt-100 glass
<b>F</b> rel. humidity	4...20 mA	FRC 3/x - ME	FRC 3/9 - ME
	0...10 V	FRC 2/x - ME	FRC 2/9 - ME
	0...1 V	FRC 1/x - ME	FRC 1/9 - ME
<b>C</b> r.h. + temp.	4...20mA, Pt 100	CRC 3/x - ME	CRC 3/9 - ME
	0...10 V, Pt 100	CRC 2/x - ME	CRC 2/9 - ME
	0...1 V, Pt 100	CRC 1/x - ME	CRC 1/9 - ME
<b>K</b> r.h. + temp.	2 x 4...20 mA	KRC 3/x - ME	KRC 3/9 - ME
	2 x 0...10 V	KRC 2/x - ME	KRC 2/9 - ME
	2 x 0...1 V	KRC 1/x - ME	KRC 1/9 - ME
<b>T</b> temperature	Pt 100	TRC 5/x - ME	TRC 5/9 - ME
	4...20 mA	TRC 3/x - ME	TRC 3/9 - ME
	0...10 V	TRC 2/x - ME	TRC 2/9 - ME
	0...1 V	TRC 1/x - ME	TRC 1/9 - ME
weight		approx. 160g	approx. 150g

/x please select the appropriate filter (refer also to data sheet F5.1)

series P\*, RC

membrane filter **ZE20**

→ **x=5**

sintered high-grade steel filter **ZE21**

→ **x=6**

## User instructions

Install the Mela®-humidity/temperature sensors in a place where characteristic climatic conditions can be measured. If it is used outdoors, it should ideally be used in a **ZA 161/1-type weather guard** (product info sheet no. F 5.1). Avoid direct sunlight.

**The specified minimum air speed and - with current output - the load according to the operating voltage (diagram) should be complied with in the case of the VC series. Deviations may lead to additional measuring faults resulting of the self-heating of the sensor**

The sensor can be installed in any position. However, do avoid positions where water ingress can occur. Dew formation and splashes do not damage the sensor, although corrupted measurement readings are recorded until all the moisture on the filter has dried up.

In order to maintain interference immunity in accordance with EN 61326-2-3 when it is in use, we recommend that you use a screened cable for connecting the RC series sensors, and have this fitted into the sensor's EMC conduit thread by a qualified electrician. The protective filter should


only be screwed off carefully to check functioning with a humidity standard.

It is important not to touch the highly sensitive sensor element in the process. If necessary, soiled filters can be screwed off and rinsed. When you screw them back on, bear in mind that sensors will not measure accurately again until they are completely dry. Sensors of the series .../9 can be completely and carefully cleaned in distilled water.


For mounting support we recommend the **console type 20.009** or the **attachment plate type ZA 20** (product info sheet no. F 5.1). In order to check functioning in the place of installation, we recommend that you use the **ZE 31/1-type Mela® humidity standard** (product info sheet no. F 5.2).

Please consult the **application notes for humidity sensing elements** (product info sheet no. A 1) or check with the manufacturer for further information which you need to bear in mind when using humidity sensors with capacitive sensing elements.


### Load at current output

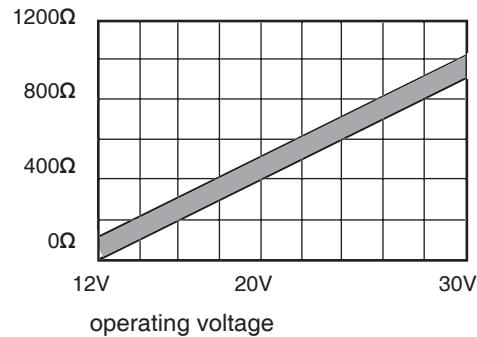


### Tolerance validity range for humidity

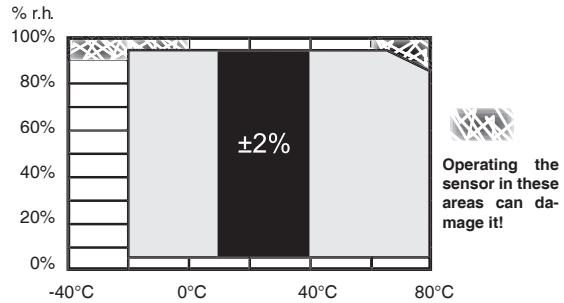


### Dimensions

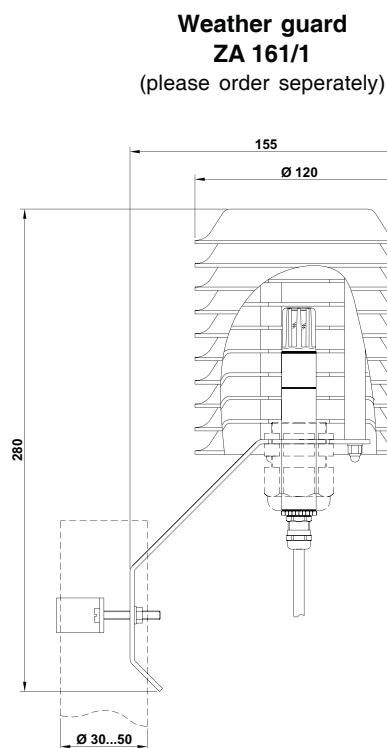


**Console for wall mounting 20.009**  
(please order separately)

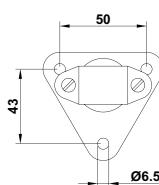

**RC series**

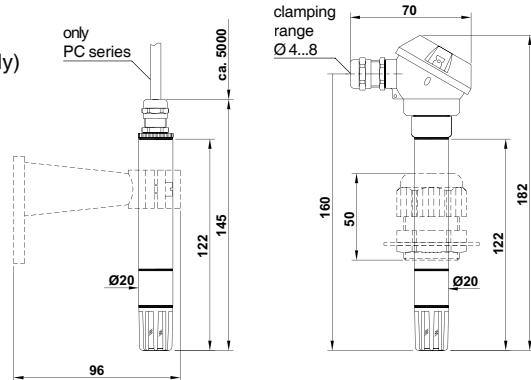


**Attachment plate ZA 20**  
(please order separately)

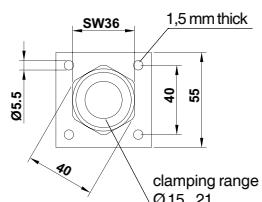

## Connection diagram


### Humidity/temperature sensors

Meteorological design series PC-ME

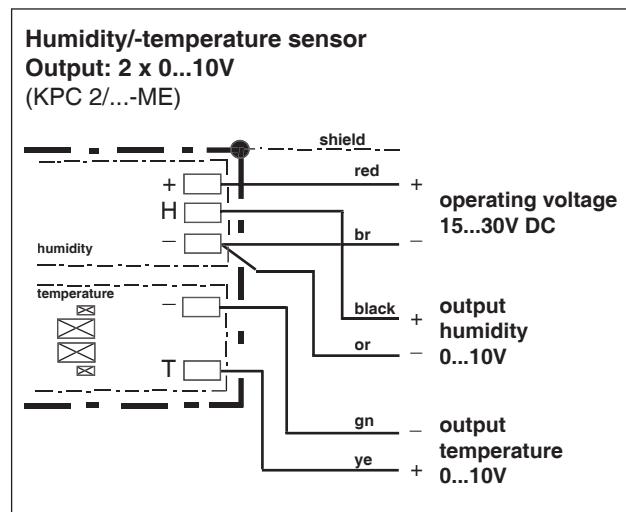


### Humidity/temperature sensor

Output: 2 x 0...1V  
(KPC 1/...-ME)


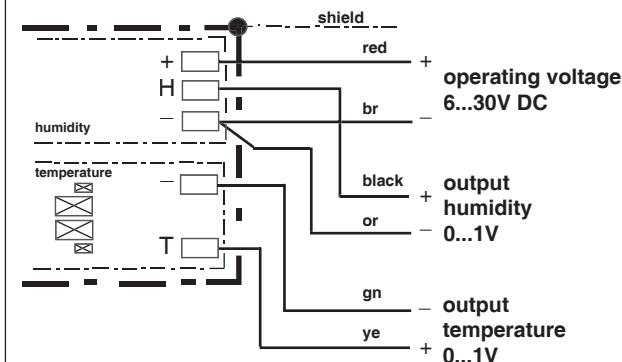


**!** The electrical connection must only be carried out by properly qualified personnel.

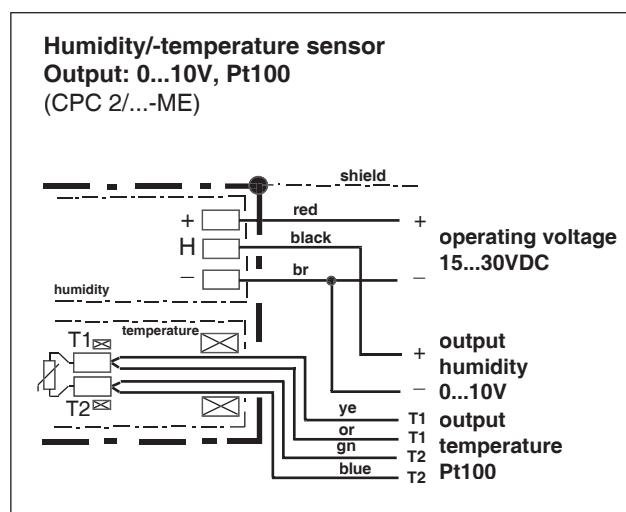


### Humidity/temperature sensor

Output: 0...1V, Pt100  
(CPC 1/...-ME)

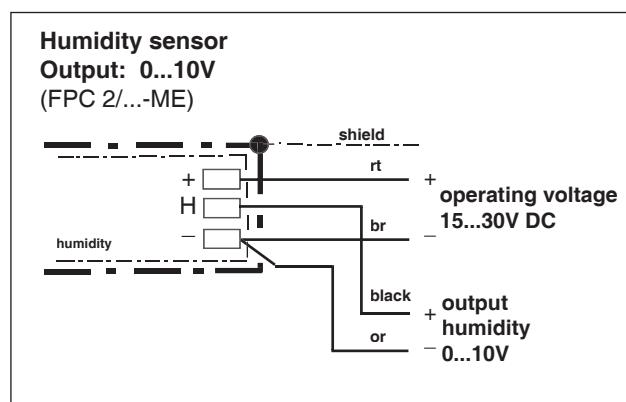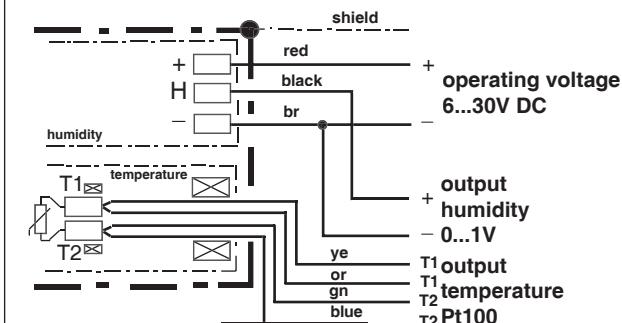

### Humidity sensor


Output: 0...1V  
(FPC 1/...-ME)

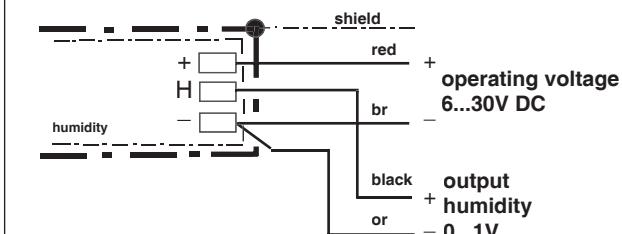


## Connection diagram

### Humidity-temperature sensors Meteorological design series PC-ME


**Temperature sensor**  
Output: 0...10V  
(TPC 2/...-ME)

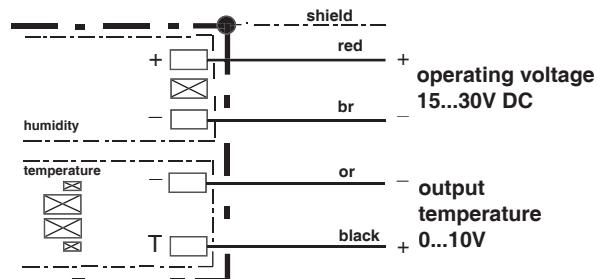

**Temperature sensor**  
Output: 0...1V  
(TPC 1/...-ME)

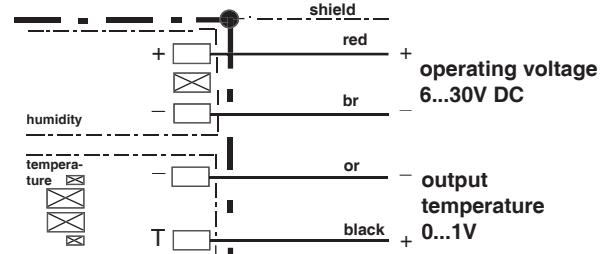

**Temperature sensor**  
Output: Pt100  
(TPC 5/...-ME)

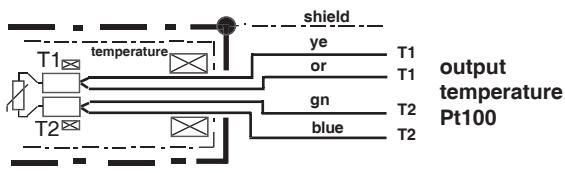


The electrical connection must only be carried out by properly qualified personnel.

## Connection diagram


### Humidity/temperature sensors

Meteorological design series PK-ME

**Humidity/temperature sensor**  
Output: 2 x 0...10V  
(KPK 2/...-ME)

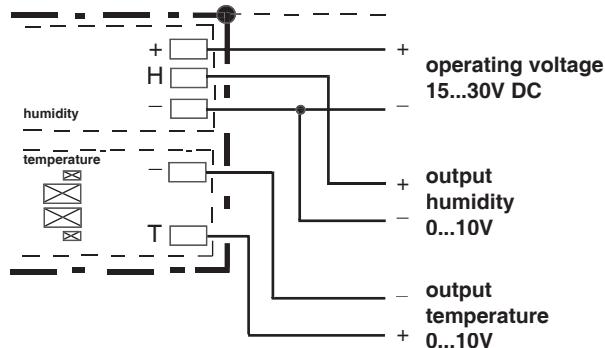


**Humidity/temperature sensor**  
Output: 2 x 0...1V  
(KPK 1/...-ME)

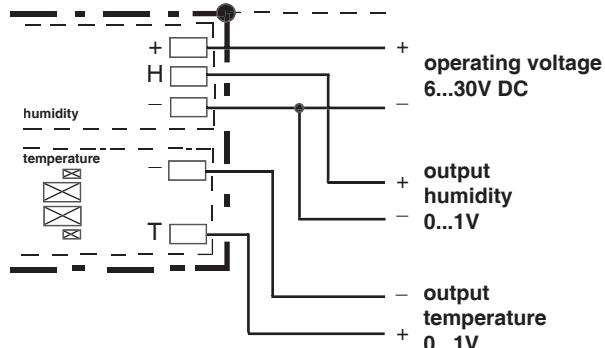


**⚠** The electrical connection must only be carried out by properly qualified personnel.


**Humidity/temperature sensor**  
Output: 0...10V, Pt100  
(CPK 2/...-ME)

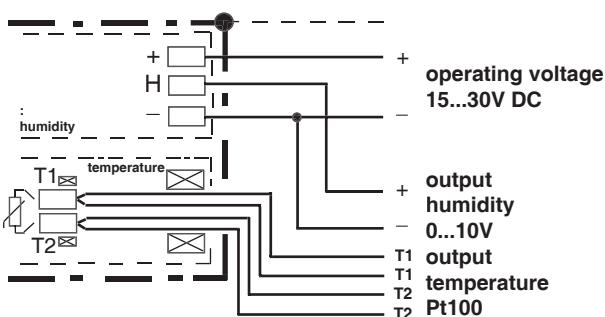


**Humidity/temperature sensor**  
Output: 0...1V, Pt100  
(CPK 1/...-ME)

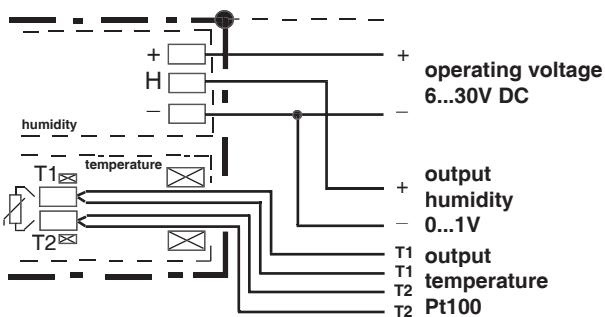

**Humidity sensor**  
Output: 0...10V  
(FPK 2/...-ME)

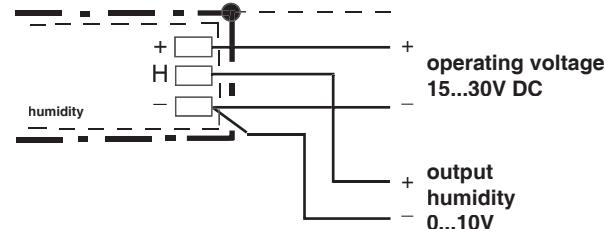


**Humidity sensor**  
Output: 0...1V  
(FPK 1/...-ME)

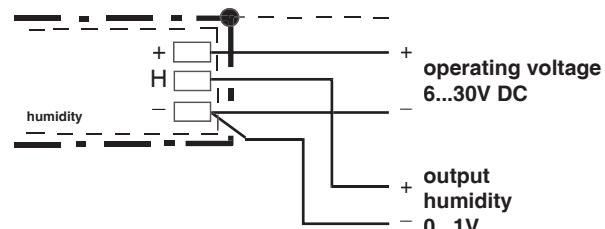


## Connection diagram

**Humidity-temperature sensors**  
Meteorological design series PK-ME


**Temperature sensor**  
**Output: 0...10V**  
(TPK 2/...-ME)

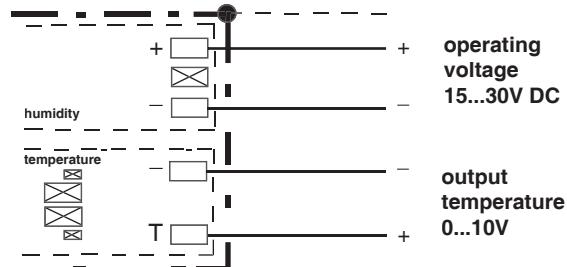

**Temperature sensor**  
**Output: 0...1V**  
(TPK 1/...-ME)

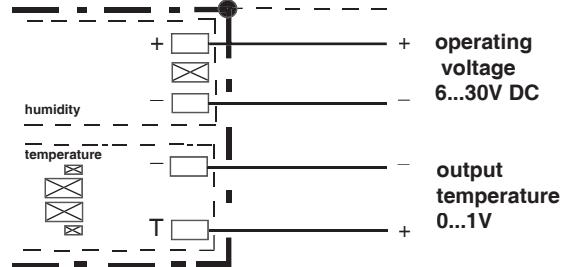

**Temperature sensor**  
**Output: Pt100**  
(TPK 5/...-ME)

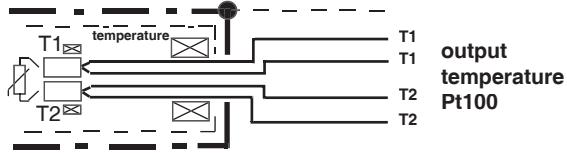


The electrical connection must  
only be carried out by properly  
qualified personnel.


## Connection diagram

### Humidity-/temperature sensors Meteorological design series RC-ME

**Humidity-/temperature sensor**  
**Output: 2 x 0...10V**  
(KRC 2/...-ME)

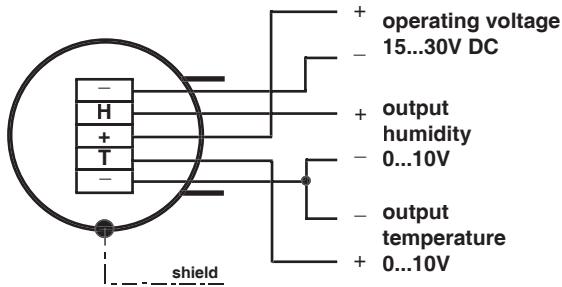


**Humidity-/temperature sensor**  
**Output: 2 x 0...1V**  
(KRC 1/...-ME)

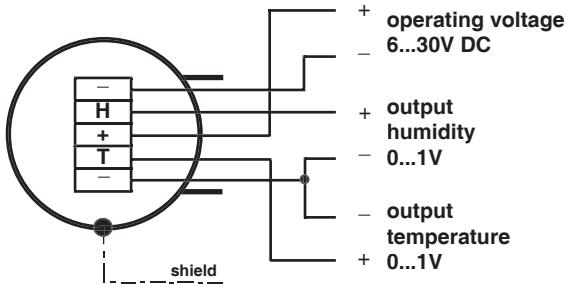


**⚠** The electrical connection must only be carried out by properly qualified personnel.


**Humidity-/temperature sensor**  
**Output: 2 x 4...20mA**  
(KRC 3/...-ME)

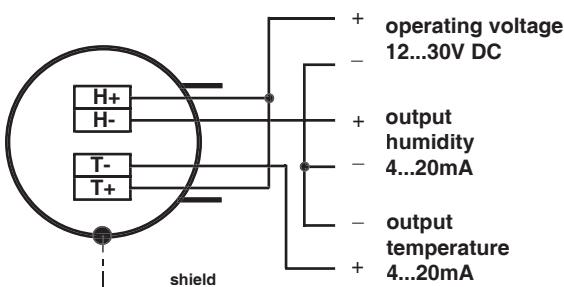


**Humidity-/temperature sensor**  
**Output: 4...20mA, Pt100**  
(CRC 3/...-ME)

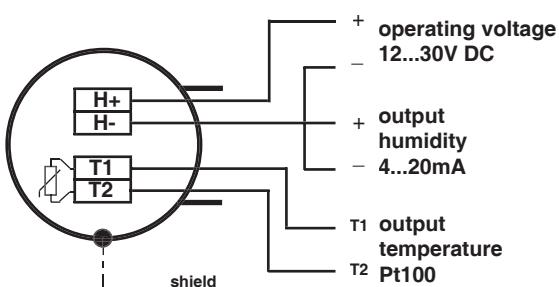

**Humidity-/temperature sensor**  
**Output: 0...10V, Pt100**  
(CRC 2/...-ME)


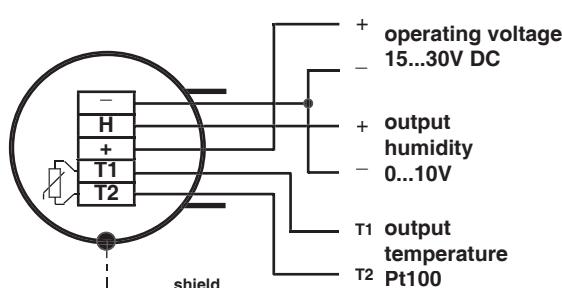


**Humidity-/temperature sensor**  
**Output: 0...1V, Pt100**  
(CRC 1/...-ME)

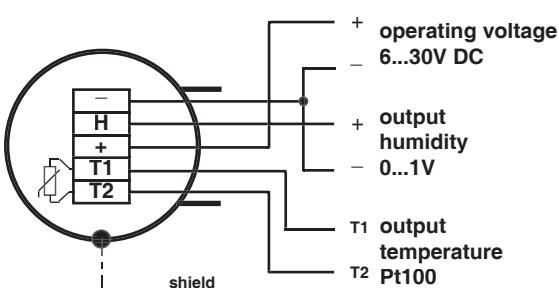

**Connection diagram****Humidity/temperature sensors**

Meteorological design series RC-ME

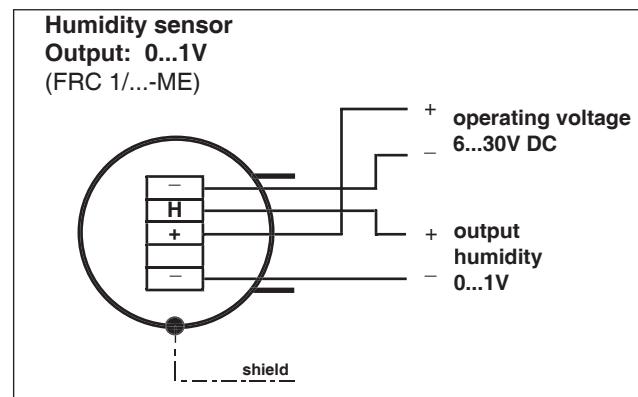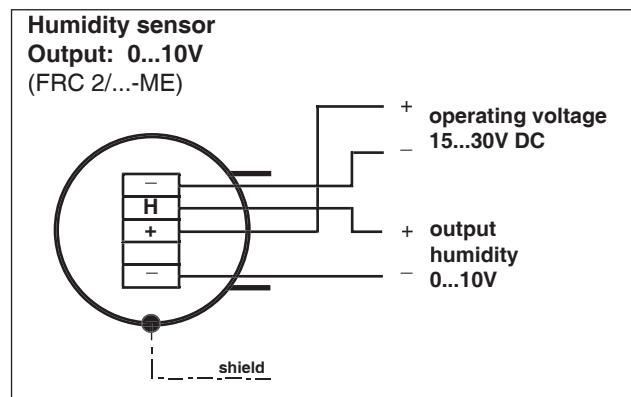

The electrical connection must only be carried out by properly qualified personnel.

